

<u>Assembly Instructions - Studio Monitor Stands</u>

by Gear4music

Thank you for purchasing the Gear4music Studio Monitor Stands. Using these step by step instructions, assembly for these stands is quick and easy to do.



Firstly, check that you have all the parts:

- 2 x Poles
- 2 x Triangular Bases#
- 2 x Square Top Shelves
- 6 x Threaded Spikes
- 6 x Threaded Retaining Nuts
- 1x Allen Key

If you find that you are missing any parts from your set, please contact Gear4music's Free Customer Service Helpline on 0330 365 4444.

Step 1 – Attaching the base to the pole



Each pole has two threaded bolts already attached in each end. Remove the bolt and washer from the bottom end of the pole (this is the end furthest away from the hand wheel).

Put the washer and bolt through the bottom of the triangular base (the bottom has three rubber stops in each corner).



Using the allen key fully screw the bolt on to the bottom of the pole until the bolt is fully tightened. The stand should now look like this.

Step 2 - Attaching the Shelf to the Pole



The top end of the pole already has a bolt screwed in. Remove the bolt using the allen key.

Place the shelf on to the pole so that the rubber strips are facing upwards and so that the hole in the middle of the shelf lines up with the pole.

Using the allen key, place the bolt through the shelf and fully tighten it in to the pole.

Step 3 – Adjusting the Height of the Stand



The stand can be adjusted to your desired height.

To do this, turn the hand wheel counterclockwise, until the pole is loose. Then, move the stand up or down to your desired height.

Add the retaining pin in to the hole closest to your desired height and then allow the stand to drop in to its resting position.

Once this is complete, tighten the hand wheel clockwise until fully tightened.

Step 4 (optional) – Attaching the Spikes to the Base



As standard, the stands have three rubber ends fitted to each base, however should you wish to use spikes, they have been included.

Simply unscrew the rubber ends and replace them with a threaded spike to your desired height. Once you are happy with the height of the spike, thread the retaining nut over the top of the spike until it is flush with the base.

At this point, your stand will be ready for use! To complete the other stand, simply repeat the process.

Should you have any more queries, please don't hesitate to contact our Customer Service Department on Freephone 0330 365 444 or email at info@gear4music.com

